


Fitting instructions

Door bottom seal

LAS3002 si

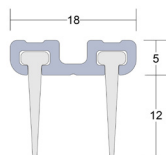

Length:

Contents include

Aluminium carrier	Bag of screws
Pre-drilled holes	Fitting instructions
Silicone "Push-fit" gasket	

Tools required

Saw (power or hand)
Screw driver
Drill (power or hand)
Knife
Pencil or Marker
Router

For further information about our products please visit our website

www.lorientgroup.com

t: +61 (02) 9905 0868
f: +61 (02) 9905 0883
e: admin@lorientau.com.au

Instructions

1. If installed, remove door from its hinges, lay door on its edge and firmly restrain.
2. Measure and mark out the seal position along the centre line of the door stile/ bottom. (Note that the finished groove should be 20mm wide).
3. Fit a suitable cutter into the router, set guide and machine a 5mm deep groove along the edge/bottom of the door.
4. Clean dust and chips from the groove and check depth by applying seal.
5. Measure the door height/ width and cut the seal to suit, using a sharp knife for the silicone gasket and a saw for the aluminum section.
6. Replace silicone gasket and screw fix the aluminium section into the groove using the screws supplied (fixing holes are pre-drilled).
7. Ends of the aluminium channel may be centre punched to prevent gasket movement.

Please note: Recommendations as to methods, use of materials and construction details are based on the experience and knowledge of Lorient and are given in good faith as a general guide and service to designers, contractors and manufacturers.

Lorient reserves the right to make alterations or delete installation detail without prior notice.



Important

Ensure that the installation of this product does not impede the opening or closing of the door. It is recommended to check the adjustment of the door seal periodically to ensure the door assembly to which it is fitted, closes and latches properly.

We recommend the LAS3002 si be used together with a Lorient threshold plate.

Other Lorient products:

Acoustic, smoke & fire seals
Fire resistant glazing systems
Fire resistant door hardware
Air transfer grilles/ dampers



Lorient Pty Ltd
Unit 30, 9 Powells Road
Brookvale 2100
New South Wales
Australia

+61 (02) 9905 0868
www.lorientgroup.com

All rights reserved. No part of this fitting guide may be reproduced, stored in a retrieval system, or transmitted in any means, electronic, mechanical, photocopying, recording or otherwise without the written permission of Lorient Polyproducts Limited.
© Lorient Polyproducts Ltd 2018