


## CONTENTS

Door closer	1
Jamb bracket	1
Door bracket	1
Hold open washer	1
Rod retainer clip	1
Connecting pin	1
25mm screws	3
18mm screws	2

## TOOLS REQUIRED

- Pencil or marker
- Drill with 3mm drill bit
- Phillips head screwdriver


**1**

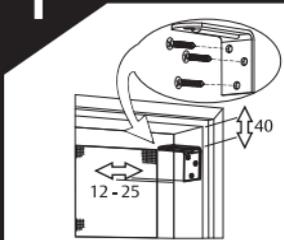

## Preparation of the Reveal

- Hold jamb bracket against hinge side jamb. Position bracket 40mm down from frame head with a gap between door and bracket of 12-25mm.
- Mark and drill 3 holes and fix bracket to jamb using 25mm screws.


**2**

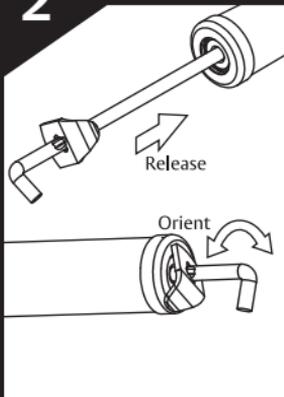

## Hold Washer & Orient Rod

- To pre-load screen door to allow self latching, start by extending the rod. Place the hold open washer against the flats by rotating a 1/4 turn on the rod. The result being that the rod cannot be pulled through the washer slot. Slowly release the rod and remove your fingers so that the washer touches the cylinder.
- Place your thumb on the washer and your finger on the rod. Twist the cylinder to correctly orient the rod to fit into the jamb bracket relative to closer tongue.


**3**

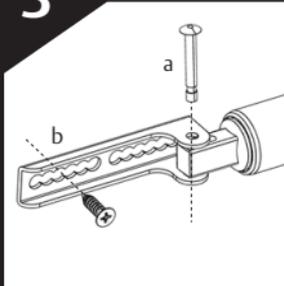

## Preparation of the Door

- a** Connect door side of closer to bracket, by inserting pin through bracket and outermost hole on closer as shown.
- b** Position door bracket level on door and mark slotted hole. Remove closer and drill 3mm hole in centre of outer slot to fix bracket with 18mm screw to door allowing horizontal adjustment.


**4**

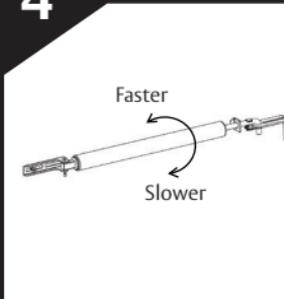

## Adjust Speed

- Refit closer. Disengage the hold open washer and try closer for correct operation of the screen door.
- Adjust speed by rotating main body of closer, following the arrows for either faster or slower door closing speed.

**5**

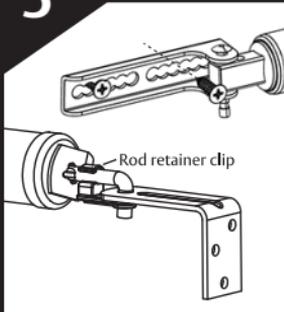

## Fix Door Bracket

- When satisfied with the closer operation, remove closer and drill hole in inner hole. Fix 18mm screw through hole ensuring that slotted screw is secured onto bracket.
- Refit closer
- Clip rod retainer into position over rod and through end hole.

## Please Note:

- Ensure door closes freely before you install door closer.
- For normal outward opening doors, door closer must be installed on the inside, hinged end of the door. For inward opening doors, the door closer is on the outside.
- When replacing an existing door closer, ensure all parts are replaced, including door and jamb mounting brackets.
- Maximum door opening angle is 90 degrees.